

## KMI

### Sezionatore



KMI-1/25A



|            |              |            |   |
|------------|--------------|------------|---|
| KMI-1/25A  | <b>23230</b> | 230/400 AC | 1 |
| KMI-1/40A  | <b>23231</b> | 230/400 AC | 1 |
| KMI-3/40A  | <b>23232</b> | 230/400 AC | 3 |
| KMI-3/63A  | <b>23233</b> | 230/400 AC | 3 |
| KMI-3/80A  | <b>23234</b> | 230/400 AC | 3 |
| KMI-3/100A | <b>23235</b> | 230/400 AC | 3 |
| KMI-1/63A  | <b>23236</b> | 230/400 AC | 1 |
| KMI-4/100A | <b>23237</b> | 230/400 AC | 4 |
| KMI-4/63A  | <b>27250</b> | 230/400 AC | 4 |
| KMI-3/25A  | <b>27251</b> | 230/400 AC | 3 |
| KMI-2/25A  | <b>27254</b> | 230/400 AC | 2 |
| KMI-2/40A  | <b>27255</b> | 230/400 AC | 2 |
| KMI-2/63A  | <b>27256</b> | 230/400 AC | 2 |

L'interruttore di manovra-sezionatore serve per scollegare i circuiti attraversati da corrente nominale.

## KMI

### Sezionatore



KMI-1/25A



KMI-1/40A



KMI-3/40A



KMI-3/63A



KMI-3/80A



KMI-3/100A



KMI-1/63A



KMI-4/100A



KMI-4/63A



KMI-3/25A



KMI-2/25A




KMI-2/40A




KMI-2/63A

## KMI


### Sezionatore

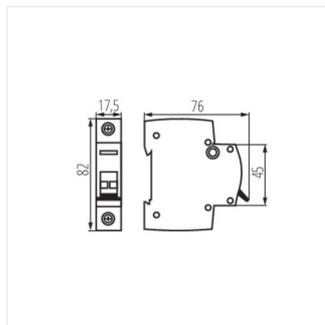


KMI-1/25A

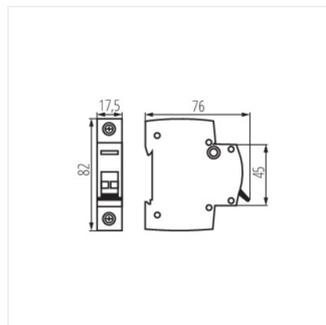


KMI-1/40A

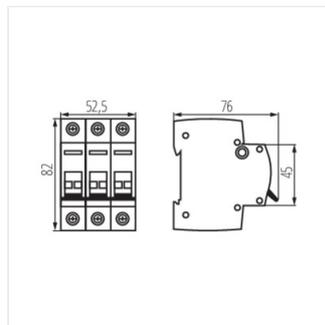


KMI-3/40A

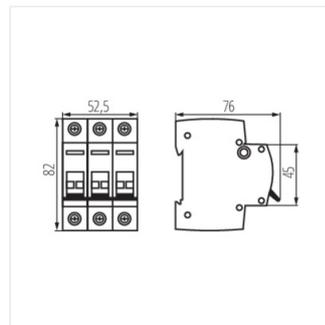


KMI-3/63A

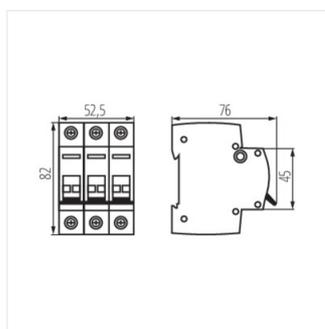


KMI-3/80A

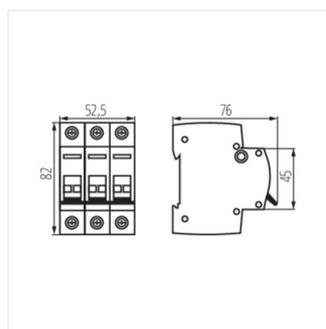


KMI-3/100A

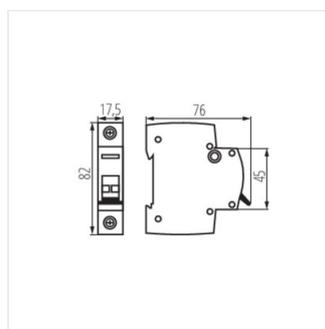


KMI-1/63A

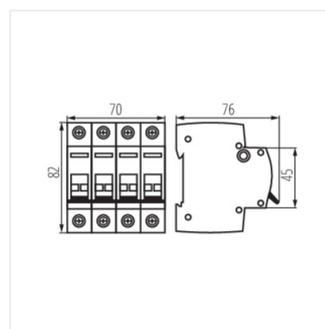


KMI-4/100A

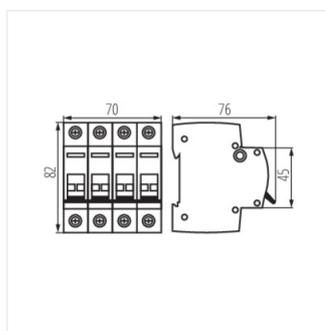


KMI-4/63A

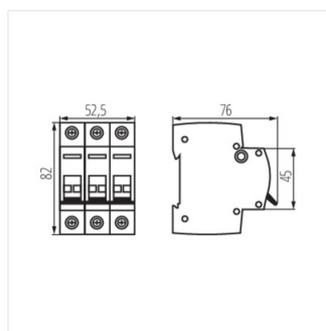


KMI-3/25A

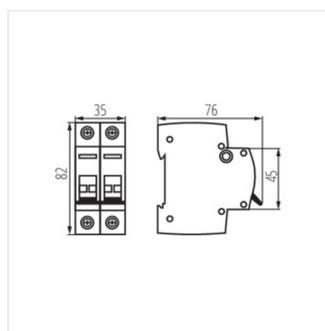

KMI-2/25A

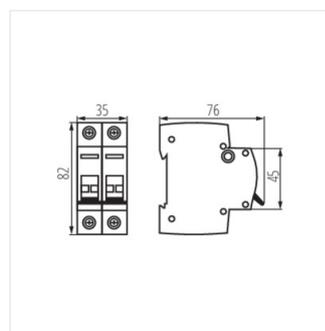

KMI-2/40A

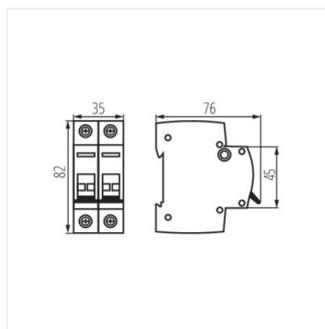

KMI-2/63A